



1218 50TH AVENUE PLAZA WEST,
BRADENTON, FL34207

TEL: 941 753 4818

FAX: 941 755 9799

E-MAIL: INFO@CUSTOMCHUTES.COM

How to use Trim zippers

Parasails are flying machines and sometimes require trimming.

The chute should fly like this, nice and straight. On occasion following a repair, having been stretched in the water or just as a result of age, it may start to fly to one side all the time; to correct this use the **Trim zippers** which are located **here**.



Close the zip 2" - 3" and fly again, keep trimming until the chute flies straight again. If the chute flies this way **trim here** or this way **trim here**.

NEVER TOGETHER

**NEVER SHORTEN OR
TIE KNOTS IN THE LINES.**

Only use the trim zippers for trimming the chute and no other use.

